


## **Installing the Smoothline® Flush-mount Wall Plate System for Wood in a Stone Surface Using Part No: WD-100-1-WH**

It is possible to install the Smoothline wall plate system for wood in a marble or other stone surface by having the stone waterjet cut to the shape of the wood system flange.

The flange can then be mounted flush with the face of the stone. To ensure a satisfactory finish, the junction box should be fixed firmly in place and the flange should be glued to the solid surface material.

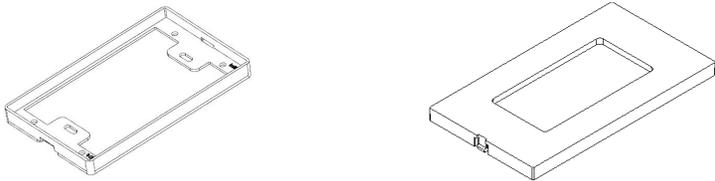

1. Frame the wall so the junction box will be centered on the opening in the solid surface. If using an adjustable junction box, notch the stud to allow the box bracket to sit flush.



2. Complete the solid surface material installation, making sure the junction box is centered in the opening. The junction box needs to be at a depth that allows the wood system flange to end up flush with the solid surface.



3. Insert the Smoothline wall flange. Glue the flange to the stone using a glue that is compatible with the solid surface. It may be easier to glue the flange in before installing the stone.



4. Install the outlet or switch and insert the Smoothline cover.

